




READY-MADE ROLLER BLINDS

Fixing instructions

1. INSIDE OR OUTSIDE RECESS?

If fitting **outside** the recess this blind is ready to hang. The fabric should overlap the recess by 3" (76mm) at top, bottom and both sides.

If fitting **inside** you will probably need to trim the blind as described at 5.

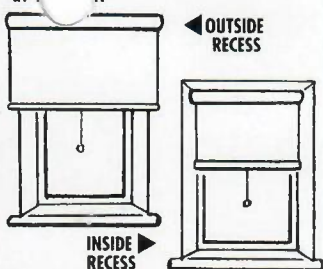

2. LEFT OR RIGHT HAND CONTROL?


The choice is up to you. The control unit with the plastic chain, 'plugs' into the left hand end of the roller for left hand control, and the right hand end for right hand control. The small end stop plugs into which ever end of the roller is left free. **BUT DON'T PLUG THEM IN UNTIL AFTER TRIMMING THE ROLLER!**

3. FACE OR TOP FIX?

Face fixing is when the bracket is fixed on the 'face' of a vertical surface, such as the window frame or wall.

Top fixing is when the bracket is fixed to the underside of a horizontal surface such as the underside of the recess.

You need to decide which method you wish to use before assembling the brackets.

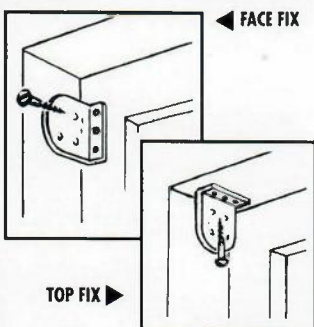


ALL FITTINGS, SCREWS AND INSTRUCTIONS INSIDE PACK

4. ASSEMBLING THE BRACKETS


The two plastic inserts should be identified and pushed into the retaining clips on either of the brackets shown below

BRACKET ASSEMBLY FACE FIX

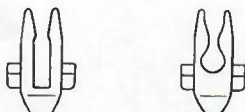

CONTROL END

PIN END

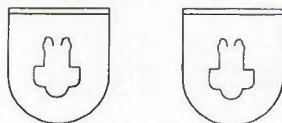

BRACKET ASSEMBLY TOP FIX

IF YOU DO NOT NEED TO TRIM YOUR BLIND GO STRAIGHT TO POINT 6.


5. TRIMMING YOUR BLIND

If fitting **outside** the recess, trim the roller and the fabric to whatever size you wish. Remember that when the blind is assembled and fitted into the brackets, the overall width will be 1 3/8" (35mm) wider than the fabric width.

If fitting **inside** the recess, measure the overall width of the recess and deduct 1 1/2" (38mm). Then cut the roller and the fabric to this dimension.

NB Remember to trim equal amounts off each side of fabric to keep the design or scalloped trim central. (Eg if trimming 6" in total, trim 3" off each side).

Unroll the blind fully. Cut the roller with a hacksaw. Cut the fabric with a 'Stanley' Knife, preferably with a new blade, or sharp Scissors (using a straight edge).

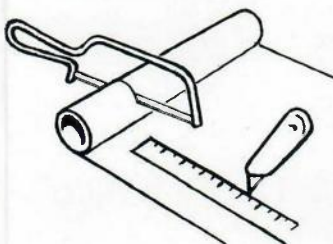


6. ASSEMBLING THE BLIND

The blinds are reverse rolled at the factory so that the correct side of the fabric is displayed in the pack.

This means you must now re-roll the blind so that the correct side will show into your room.

Then push in the control end and the pin end into the roller. Remembering whether you want right or left hand control.

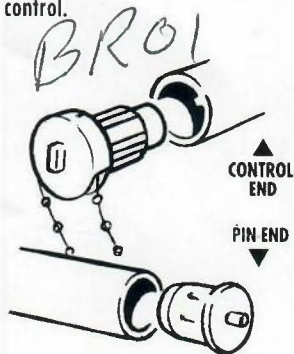

7. FIXING THE BRACKETS

If fitting **outside** recess the brackets should be positioned so that the gap between them is the width of the fabric (after trimming, if trimming is necessary) plus 1 3/8" (35mm) for tolerance.

If fitting **inside** recess the brackets fit at either end of the recess and you will then trim the blind width to fit.

Hold the brackets in position and mark the position for the drill holes: two per bracket. Ensure the brackets are horizontal or your blind will hang crooked.

8. FITTING THE BLIND

Present the rolled blind to the brackets. Insert the pin end first, then locate the flat locking pin on the control end above the plastic insert and twist so that the flat pin drops down the slot.

CAUTION

Take care not to force the chain connecting link between the wheel and cover.

IMPORTANT

Before placing the blind into the brackets, be sure that the fabric is evenly rolled.

9. OPERATING YOUR BLIND

Pull the cord one way to lower, the other to raise the blind. It can be positioned at any desired height.

