

Masco Plumbing Group




Installation guidelines

K03

Mono Kitchen Mixer Taps:

1. To install the tap one 35 mm tap hole is required.
2. Screw the copper tails into the base of the mixer tap. For mixers where one of the copper tails has a red label affixed, this should be screwed into the thread with the red mark. For mixers without this colour label on the copper tails, the hot connection is to the left and the cold connection is to right, when viewed from the front.
3. Place the rubber gasket and if necessary a baseplate under the mixer tap.
4. Pass the copper tails through the tap hole.
5. Connect the product to the water supply ensuring that the hot supply is connected to the hot side and cold to the cold side.
6. Remove the flow straightener and flush out the product with both hot and cold water to clear any debris which may be in the body of the mixer.
7. For further information please contact:

Masco Plumbing Group
Caxton Way
Watford
Hertfordshire
WD1 8ZF
Tel: 01923 690130 (Service)

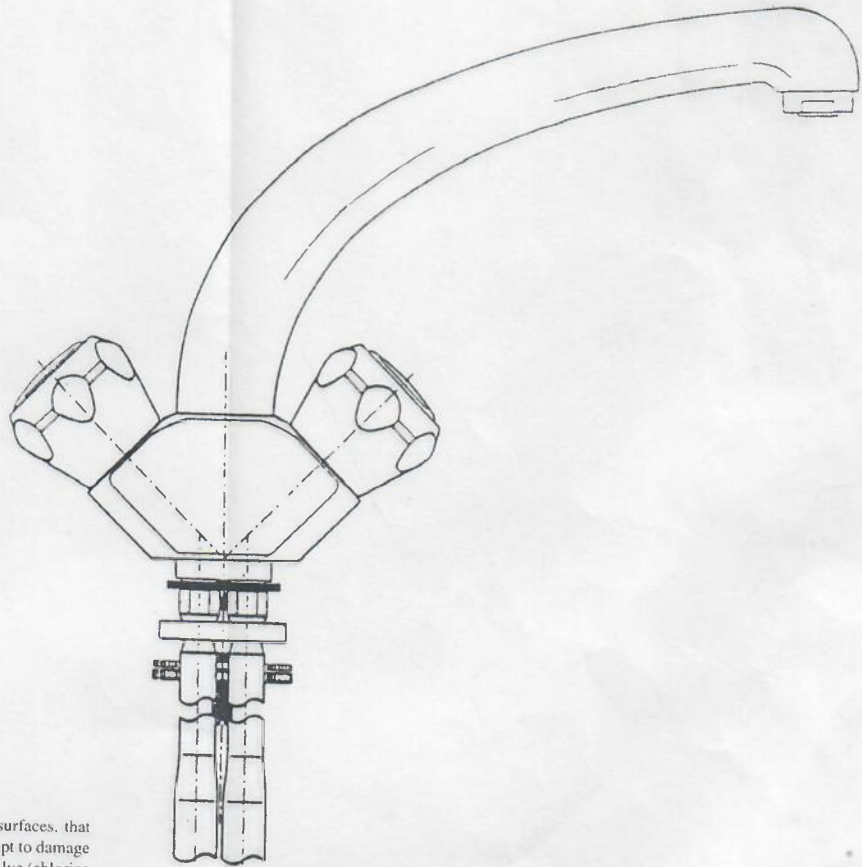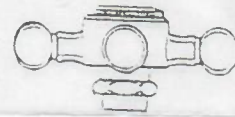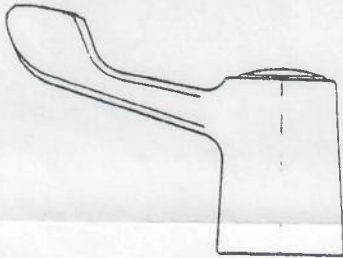

INSTRUCTIONS FOR CLEANING FITTINGS

It is important to remember when cleaning your mixer taps of all surfaces, that scouring cleaning materials must on no account be used as these are apt to damage the surface. Please do not use agents containing strong acids or bases, lye (chlorine or sink cleaning material), acetone or ammonium chloride.

PLEASE NOTE: Where there may be a risk of frost damages the mixer tap should be drained of any residual water.

EP5302500